


Installing Tuffline Magnetic: A2 frames

1. Tuffline Frame
2. Tuffline Magnetic Graphics
3. Metal Wall Batten
4. Suction Cup
5. Instruction Sheet

NOTE: This is general advice only, ensure you have the correct wall plugs/mount plugs and drill equipment. Select a suitable safe location for installation.

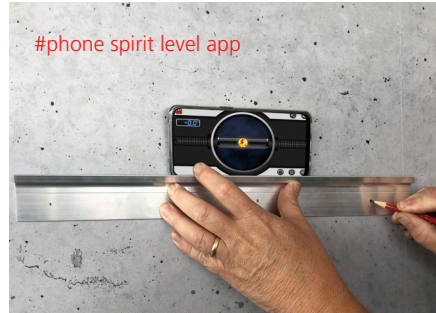

1. Using a spirit level or mobile phone levelling app, mark desired screw position on wall ensuring split batten is level.
Note: Top of Tuffline frame will sit approx 30mm above the split batten when installed.



2. Once you have positioned the batten in the desired place, screw to wall. In most cases you will require wall plugs and you must ensure its a safe place for the frame to hang.



3. This is how the frame sits on the batten.



1. Batten fixed to your wall.



2. Placing frame onto batten.



3. Once your frame sits nicely on the wall, place your magnetic graphic in the frame. There is a suction cup to help remove or reposition